

QUICK GUIDE TOUCH R700/NAVI 900

The home screen contains all applications including audio, telephone and navigation. You can select them by pressing any application on the touch screen.



The control elements underneath complement the touch screen:

RADIO: Switch to radio. Press repeatedly to toggle between FM, AM or DAB.

MEDIA: Switch to media. Press repeatedly to toggle between CD, USB, Bluetooth® audio, aux or SD card.

: Return to the home screen.

BACK: Return back to the parent menu.

Home screen personalization

 
Press and hold any application to enter the edit mode.



Drag the icon to its new position.

Audio

: Switch to the main screen of the current audio source.

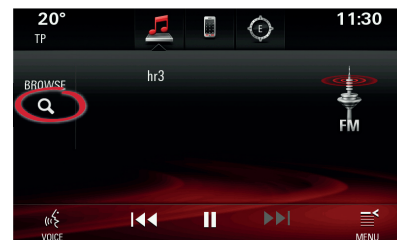


Change the audio source by pressing **RADIO** or **MEDIA**.

: Open the list of radio stations or media files.

: Turn to scroll lists. Press to select a list element.

Favourites

 The favourites are accessible from the bottom of the screen.

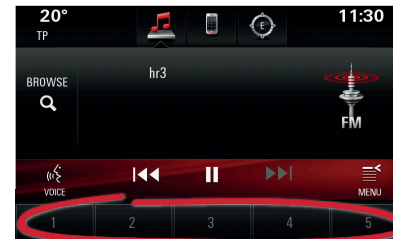

Radio stations, phone contacts, artists, playlists, navigation destinations, etc. can be stored as favourites.

 
Reveal favourites

Favourites can be revealed in two ways:

- Press the reveal button at the bottom of the screen.




- Drag the interaction bar upwards.

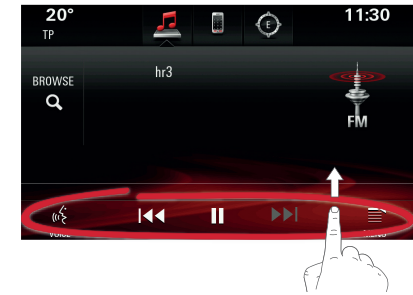


Store favourites

 Press and hold on any favourite until a beep sounds to store an item.

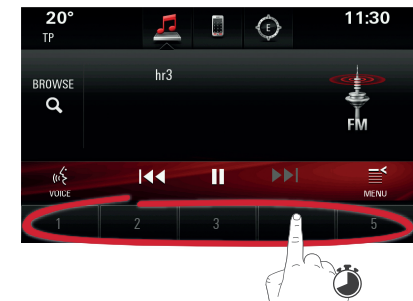

Wir leben Autos.

 It might be required to further define the favourite item.

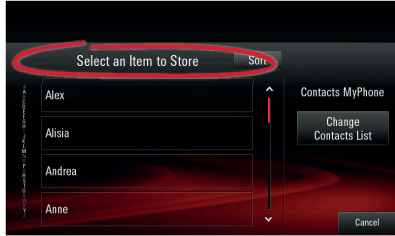

Navigation

Enter city, street, crossroad or full address.

Refer to the infotainment system manual for the country-specific order.

For destinations abroad, add the country to the address: <address> <country>.

Voice recognition

Press on the steering wheel to start voice recognition. Wait for the signal to talk and refer to the instrument display for valid commands.

Phone and audio

To call a contact, e.g. say 'Call Anna'. To play music etc., e.g. say 'Play artist Mozart'.

Navigation

First say 'Navigation'. Then say the destination type, e.g. 'Address' or 'Point of Interest'.

Touch pad

Control the cursor on the screen via touch pad gestures. Press on the touch pad to select an item.

Navigate cursor

Move one finger across the touch pad.



Scroll lists/text

**On audio main screen:
Change radio/media source**

Move two fingers up/down.



**On audio main screen:
Skip to the next track/
radio station**

Move two fingers left/right.



Reveal/hide favourites

Move three fingers up/down.



Character recognition

 
To enter e.g. an address or a phone number, capital letters or numbers can be drawn with finger on the touch pad.

Whenever alphanumeric input is possible, press the button.



Select alternative characters

Move two fingers up/down.

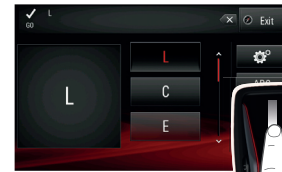

Delete a character

Move finger from right to left.



Confirm entry

Press and hold two fingers until confirmation.



Instrument display

The instrument display provides access to functions like navigation, phone and audio. Operate it using the five-way controller on the right side of the steering wheel.



- Select menu items.
- Enter a sub menu.
- Return to the parent menu.
- Confirm selection.